


INSTRUCTION MANUAL

FUNCTIONS

1. Time/Temperature display: Can display Hour, Minute and temperature of ambience.
2. Touch Light, talking current time and temperature at the same time.
3. Talking Time of Integer Hour: Can set talking time for every Integer Hour from AM: 7.00 to PM: 9.00.
4. Talking Time of Set Alarm: Can unseal/close the talking time of set alarm function.

PRODUCT SHOWS

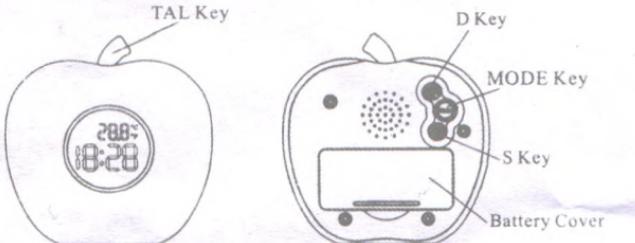

OPERATION MANUAL

1. Installing Batteries

Open the battery cover, install two AAA batteries according the polarity mark in the battery box.

2. Press Key Operation

"D" Key: At normal display, press "D" key to choose switch for 12/24
"MODE" Key: At normal display, press "MODE" key to enter function setting.

"S" Key: At normal display, press "S" key, can choose three kinds of different music.

"TAL" Key: At normal display, dial "TAL" key, can unseal talking time and temperature function.

3. Symbol Operation

At normal display "Hour:Minute", and ":" flash.

" " switch alarm function, when the LCD displays the symbol, the set alarm time arrives, it will talking current time and Temperature, And sound out current music ring, talking time will continue one minute, press "D" or "S" Key to stop the sound. If the LCD without the symbol,

alarm is not set.

" " talking time for every integer hour, when the LCD displays the symbol, when time to integer, can talking time and temperature. If the LCD without the symbol, talking time and temperature are not set.

" " Integer hour Show from AM: 7.00 to PM: 9.00

"PM" PM time for 12 hour format.

4. Time setting

At normal display, press "MODE" Key one time to set the current time, and then press "D" Key to adjust hour, press "S" Key to adjust minute. After you set, it will return at normal time display if you don't press the Key more than ten seconds.

5. Alarm & Time setting

At normal display, press "MODE" Key two times to set alarmtime, and then press "D" Key to adjust hour, press "S" Key to adjust minute, after you set, it will return at normal time display if you don't press the Key more than ten seconds.

6. Alarm unseal and turnoff setting

At normal display, press "MODE" Key three times, and then press "S" Key to close or unseal alarm function, appear " " at the same time, when the alarm unseal, it will play the music ring when the alarm time arrive the setting time, talking time will continue one minute, it will talk time one time when the music talking at last second.

7. Talking Time Of Integer Hour setting

At normal display, press "MODE" Key three times, and then press "D" Key to choose talking time for every Integer Hour from AM: 7.00 to PM: 9.00, the LCD displays the symbol " " or " ".

8. When talking in English, temperature display in "°C" and "°F", to switch the temperature display between "°C" and "°F", please hold "D" key for three seconds, while talking in other languages, just display as "°C".

Attentions


1. When the product has been used for a long time and the display becomes faint, please change new batteries of the same size.
2. If the time is incorrect after change the battery, please adjust it again.
3. If there was something wrong of the item, repaired by a professional or contact our company.

說明書

主要功能

- 1、時間溫度顯示：可顯示時、分及周圍環境溫度；
- 2、按動發光，同時播報當前時間及溫度；
- 3、整點報時：可設置每一整點報時或從早上7點至晚上9點整點報時
- 4、定鬧報時：可開啓/關閉定鬧報時功能

產品圖示

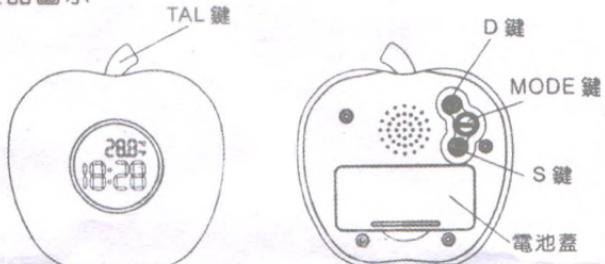

使用說明

一、電池安裝

打開電池蓋，按電池盒上標示的電池極性裝上二節AAA電池。

二、按鍵說明

“D”鍵：正常時間顯示下按此鍵選擇12/24小時轉換

“MODE”鍵：正常時間顯示下按此鍵進入功能設置

“S”鍵：正常時間顯示下按此鍵可選擇不同的音樂及音效

“TAL”鍵：正常時間顯示下按動此鍵可播報當前時間及溫度

三、符號說明

正常時間顯示“小時：分鐘”，其中的“：“會閃

“”表示定鬧功能，當顯示屏上顯示此符號時，到設定的鬧鈴時間，會播報當前時間及溫度和發出當前選擇的音樂鈴聲，播報時間持續一分鐘，按“D”鍵或“S”鍵中斷鬧鈴，無此符號則無此功能。

“”表示每一整點報時，當顯示屏上顯示此符號時，時間到整點時，會播報當前時間及溫度，無此符號則無此功能

“(00)”表示從早上7點到晚上9點整點報時

“PM”表示12小時制下午時間

四、時間設置

在正常時間顯示下，按“MODE”鍵一次進入當前時間設置，此時按“D”鍵調整小時，按“S”鍵調整分鐘，調好后不按按鍵十來秒后自動回到正常時間顯示。

五、定鬧時間設置

在正常時間顯示下，按“MODE”鍵二次進入定鬧時間設置，此時按“D”鍵調整小時，按“S”鍵調整分鐘，調好后不按按鍵十來秒后自動回到正常時間顯示。

六、定鬧開啓/關閉設置

在正常時間顯示下，按“MODE”鍵三次后按“S”鍵可關閉或開啓定鬧功能，同時出現定鬧符號“”。當鬧鈴開啓后，鬧鈴時間到達所設定的時間會播放當前選擇的音樂鈴聲，播放時間持續一分鐘，當音樂播放到最后一秒時會播報當前時間一次。

七、整點報時設置

在正常時間顯示下，按“MODE”鍵三次后按“D”鍵可依次選擇每一整點報時或從早上7點到晚上9點整點報時，同時依次出現符號“(00)”或“”

八、英文報時溫度顯示為“°C”或“°F”，長按“D”鍵3秒鐘可實現攝氏度“°C”華氏度“°F”的轉換，其它語言報時溫度顯示為“°C”。

注意事項

1、本機正常情況下如鬧鈴音輕、沙啞、時間顯示暗淡不滿均是電池需要更新現象。

2、如更換電池后時間不對，請重新調整。

3、如本產品有任何異常，請找專業人員檢查維修或與本公司聯繫。