
BARRIER FREE CLOCK INSTRUCTION MANUAL

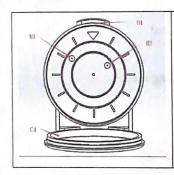


O1-Front Cover Open Position

H1- Hour Hands

H2- Minute Hands

C4 -Front cover open status

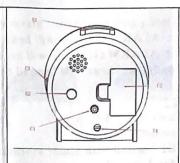

C1-CURRENT TIME SETTING
C2-BATTERY INSERT
C3-ALARM SETTING
S1-BROADCAST ON/OFF SWITCH
S2-VOLUME SETTING
V1-VIBRATE INSERT

Sleeping Funcion Setting:

Pres button S1 for 5 seconds, access to sleep mode, you hear "DI DI" sound
Press button S1 for 5 seconds again, talking speaking activated, you hear "DI DI DI DI" sound

Time and Date Speaking:

Under normal mode condition:

Press button S1 once, CURRENT TIME speaking

Press button S1 again, CURRENT DATE speaking

After 5 seconds no more operation, will hear "DI" sound

At this moment, the product access to normal working status

Broadcast Functional Operation

Hour Setting

Press button S2 once, access to hour setting mode, you hear "hour setting" announcement Hence press button S1 set hour

Minute Setting

Press button S2 again and again until hear "minute setting" announcement Hence press button S1 set minute

Year Setting

Press button S2 again and again until hear "year setting" announcement Hence press button S1 set year

Month Setting

Press button S2 again and again until hear "month setting" announcement Hence press button S1 set month

Date Setting

Press button S2 again and again until hear "date setting" announcement Hence press button S1 set date

Alarm Hour Setting

Press button S2 again and again until hear "alarm hour setting" announcement Hence press button S1 set alarm hour

Alarm Minute Setting

Press button S2 again and again until hear "alarm minute setting" announcement Hence press button S1 set alarm minute